



ORIGINAL	SUPERIOR
	POWER
	MUTE
	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DISC MENU	 / SOURCE
 / SOUND SETTINGS	-/--
 / OPTIONS	
SUBTITLE	
VOL+	VOL+
VOL -	VOL -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
 / BACK	BACK
TOP MENU	FAV
RED / DISC	RED
GREEN / DOCK FOR iPod	GREEN
YELLOW / HELP	YELLOW
BLUE /  / SOURCE	BLUE
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
PAUSE	 / SMART TUBE

[illegible]