



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DISPLAY	
MODE	
TXT	
VOL+	VOL+
VOL-	VOL-
PAGE UP	P+
PAGE DOWN	P-
UP / CH+	UP
DOWN / CH-	DOWN
LEFT / VOL-	LEFT
RIGHT / VOL+	RIGHT
OK	OK
RECALL	BACK
SLEEP	SLEEP
TV/R	TV/DTV
FIND	INFO
EPG	EPG
FAV	FAV
RED / AUDIO	RED

ORIGINAL	SUPERIOR
GREEN / PAUSE	GREEN
YELLOW / ZOOM	YELLOW
BLUE / INFO	BLUE
F1	SHIFT+1
SAT	SHIFT+7
USB	SHIFT+AV
	SHIFT+ 
SUB.	SHIFT+DOWN
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
TIME	SHIFT+SLEEP
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

