



ORIGINAL	SUPERIOR
	POWER
	MUTE
/ HOME MENU	MENU
X / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDMI CTRL	/ SOURCE
I - II	-/--
TOOLS	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
TV/DTV	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
	/ NET TV
	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
INPUT 1	SHIFT+1
INPUT 2	SHIFT+2
INPUT 3	SHIFT+3
INPUT 4	SHIFT+4
INPUT 5	SHIFT+5
INPUT PC	SHIFT+6
	SHIFT+
	SHIFT+
	SHIFT+
	SHIFT+
	SHIFT+INFO

