



ORIGINAL	SUPERIOR
TV	POWER
	MUTE
/ MENU / HOME ME.	MENU
X / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
HDD / AV SELECTION	/ SOURCE
CTRL. / HDMI	-/--
VOL+	VOL+
VOL-	VOL -
P+ / NEXT PAGE	P+
P- / PREV. PAGE	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
DTV	TV/DTV
i+ / INFO	INFO
EPG / DVD T. M. / GUI.	EPG

ORIGINAL	SUPERIOR
/ REC STOP	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
TOOLS / I-II	SHIFT+MUTE
INPUT - 1/2/3/4	SHIFT+ 1/2/3/4
INPUT - 5/6/7/8	SHIFT+ 5/6/7/8
RADIO	SHIFT+ -/--
DVD / SCREEN SIZE	SHIFT+
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
*→ / CM SKIP	SHIFT+RIGHT
CH. RETURN	SHIFT+BACK
TV	SHIFT+ TV/DTV
P. INFO	SHIFT+INFO
PAUSE / 	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

