



ORIGINAL	SUPERIOR
– RECEIVER	POWER
MUTE	MUTE
/ HOME MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT – ←	/ AV
INPUT SELECT – →	-/--
VIDEO PARAMETER	
X / AUDIO PARAMETER	
D. ACCESS	
CH. LEVEL	
VOLUME -/+	VOL -/+
PRESET -/+	P -/+
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
BAND	TV/DTV
i / STATUS	INFO
PTY.	EPG
+ FAVORITE	FAV
L. MO. – AU./ALC/DIR.	

ORIGINAL	SUPERIOR
LIS. MODE – STAND.	
LIS. MODE – ADV. SUR.	
FEATURES – PHASE	RED
FEATURES – PQLS.	GREEN
FEAT. – AUTO S. RTRV.	YELLOW
FEATURES – MC. ACC.	BLUE
AUDIO	SHIFT+MUTE
/ TOOLS MENU	SHIFT+MENU
BD	SHIFT+1
CD	SHIFT+2
DVD	SHIFT+3
DVR / BDR	SHIFT+4
HDMI	SHIFT+5
iPod / USB	SHIFT+6
NET.	SHIFT+7
SAT / CBL.	SHIFT+8
TUNER	SHIFT+9
TV	SHIFT+0
CLASS	SHIFT+ -/--
TUNE -/+	SHIFT+ P -/+
2 nd ENTER	SHIFT+OK
SIGNAL SEL.	SHIFT+ TV/DTV
DIMMER	SHIFT+INFO
MPX	SHIFT+EPG
SPEAKERS	SHIFT+FAV

