

ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
STANDBY / ON	POWER	SPEAKERS	FAV	BAND	SHIFT+ [MUTE]
MUTE	MUTE	AUTO / ALC / DIRECT	[UP] / NET TV	PRESET -	SHIFT+DOW
[HOME] / HOME MENU	MENU	PAUSE	[PAUSE]	PRESET+	SHIFT+UP
1/2/3/4/5	1/2/3/4/5	STOP	[STOP] / SMART	INPUT SELECT PREV.	SHIFT+LEF
6/7/8/9/0	6/7/8/9/0	REW	GREEN	INPUT SELECT NEXT	SHIFT+RIGH
SIGNAL SEL.	[SOURCE] / SOURCE	PLAY	YELLOW	TUNE+	SHIFT+ P+
CH. LEVEL	-/--	FWD	BLUE	TUNE -	SHIFT+ P -
DISP. / AUTO S. RTRV.	[DISP]	AUDIO / THX	SHIFT+MUTE	[REPEAT]	SHIFT+BAC
VIDEO PARAMETER	[VIDEO]	TOOLS MENU	SHIFT+MENU	DIMMER	SHIFT+INFI
FEATURES – ECO	[ECO]	HDMI OUT	SHIFT+EXIT	+ FAVORITE	SHIFT+FAV
AUDIO PARAMETER	[AUDIO]	ADPT.	SHIFT+1	CLASS	SHIFT+RECI
VOLUME+	VOL+	BD	SHIFT+2	MC ACC.	SHIFT+GREE
VOLUME -	VOL -	CD	SHIFT+3	ADV. SURR.	SHIFT+YELLO
SKIP NEXT	P+	DVD	SHIFT+4	STANDARD	SHIFT+BLU
SKIP PREV	P -	DVR / BDR	SHIFT+5		
UP	UP	HDMI	SHIFT+6		
DOWN	DOWN	SAT / CBL	SHIFT+7		
LEFT	LEFT	MHL	SHIFT+8		
RIGHT	RIGHT	NET.	SHIFT+9		
ENTER	OK	iPOD / USB	SHIFT+0		
RETURN	BACK	TUNER	SHIFT+ [MUTE]		
SLEEP	SLEEP	[CROSS]	SHIFT+ -/--		
TV	TV/DTV	MPX	SHIFT+ [DISP]		
i / STATUS	INFO	FEATURES - PHASE	SHIFT+ [VIDEO]		
iPod CTRL.	EPG	PTY	SHIFT+ [AUDIO]		

