

ORIGINAL	SUPERIOR
POWER RECEIVER	POWER
MUTE	MUTE
HOME MENU	MENU
S. RETREIVER	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SIG SEL	 / SOURCE
+10	-/--
DISP	
MIDNIGHT	
ADV SURR	
ALC/STANDARD	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
SLEEP	SLEEP
	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
STEREO	EPG
PAHSE	FAV
AUTO/DIRECT	 / NET TV
PAUSE	
STOP	 / SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO PRAMETER	SHIFT+MUTE
BAND	SHIFT+EXIT
BD	SHIFT+1
BT	SHIFT+2
CD	SHIFT+3
DVD	SHIFT+4
GAME	SHIFT+5
SAT/CBL	SHFIT+6
TUNER	SHIFT+7
TV	SHIFT+8
BASS+	SHIFT+ VOL+
BASS -	SHFIT+ VOL -
TRE+	SHIFT+ P+
TRE -	SHIFT+ P -
CH LEV+	SHIFT+UP
CH LEV -	SHIFT+DOWN
INPUT PREV	SHIFT+LEFT

[illegible]