



| ORIGINAL      | SUPERIOR  |
|---------------|-----------|
| STANDBY/ON    | POWER     |
| MUTE          | MUTE      |
| 🏠 / HOME MENU | MENU      |
| CLEAR         | EXIT      |
| 1/2/3/4/5     | 1/2/3/4/5 |
| 6/7/8/9/0     | 6/7/8/9/0 |
| CLK/TIMER     | -/--      |
| DISP          | 📺         |
| SURROUND      | 🔊         |
| 🔧 / TOOLS     | 📋         |
| * / TOP MENU  | 📋         |
| VOLUME+       | VOL+      |
| VOLUME -      | VOL -     |
| SKIP NEXT     | P+        |
| SKIP PREV     | P -       |
| UP/TUNE+      | UP        |
| DOWN/TUNE -   | DOWN      |
| LEFT/PRESET - | LEFT      |
| RIGHT/PRESET+ | RIGHT     |
| ENTER         | OK        |
| ↶ / RETURN    | BACK      |
| SLEEP         | SLEEP     |
| RANDOM        | TV/DTV    |
| DIMMER        | INFO      |
| MEMORY        | EPG       |

| ORIGINAL          | SUPERIOR     |
|-------------------|--------------|
| PAUSE             | ⏸            |
| STOP              | 📺 / SMART    |
| REW               | GREEN        |
| PLAY              | YELLOW       |
| FWD               | BLUE         |
| AUDIO             | SHIFT+MUTE   |
| ANALOG IN         | SHIFT+1      |
| BD                | SHIFT+2      |
| BT AUDIO          | SHIFT+3      |
| FAVORITES         | SHIFT+4      |
| M.SERVE           | SHIFT+5      |
| NET SERVICE       | SHIFT+6      |
| TUNER             | SHIFT+7      |
| TV                | SHIFT+8      |
| USB               | SHIFT+9      |
| DAB/RDS DISPLAY   | SHIFT+ 📺     |
| DAB ENTER/RDS PTY | SHIFT+ 🔊     |
| DAB SCAN/RDS ASPM | SHIFT+ 📋     |
| SUBWOOFER VOL+    | SHIFT+ VOL+  |
| SUBWOOFER SUB -   | SHIFT+ VOL - |
| REPEAT            | SHIFT+BACK   |
|                   |              |
|                   |              |
|                   |              |
|                   |              |

