



ORIGINAL	SUPERIOR
STANBY/ON	POWER
⦿ / AUDIO	MUTE
HOME MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	📺 / SOURCE
HDMI	-/--
📺+ / DISPLAY	📺
CONTINUED	📺
⏮ / REPLAY	📺
⋯ / SUBTITLE	📺
RESOLUTION+	VOL+
RESOLUTION -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
↶ / RETURN	BACK
SHORT SKIP / ⏭	SLEEP
CD/SACD	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
POPUP MENU	EPG
TOP MENU	FAV
OPEN/CLOSE	⬆ / NET TV
YOUTUBE	⏸
STOP	📺 / SMART
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
AUDIO P.	SHIFT+MUTE
FUNCTION	SHIFT+📺
VIDEO P.	SHIFT+📺
🔄 / REPEAT	SHIFT+BACK
A - B	SHIFT+SLEEP
RED / PROGRAM	SHIFT+RED
GREEN / BOOKMARK	SHIFT+GREEN
YELLOW / ZOOM	SHIFT+YELLOW
BLUE / INDEX	SHIFT+BLUE

