



ORIGINAL	SUPERIOR
	POWER
MUTING	MUTE
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION	/ SOURCE
CH. SELECT	-/--
DISP. MODE	
ATT.	
DSP MODE	
TEST TONE	
VOL+	VOL+
VOL -	VOL -
CHANNEL+	P+
CHANNEL -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
MIDNIGHT	SLEEP
SIG. SELECT	TV/DTV
FL DIMMER	INFO
MPX	EPG
DOLBY	FAV
CH. LEVEL -	RED

ORIGINAL	SUPERIOR
CH. LEVEL+	GREEN
EFFECT -	YELLOW
EFFECT+	BLUE
VCR 1	SHIFT+1
VCR 2	SHIFT+2
CD	SHIFT+3
DVD/LD	SHIFT+4
MD/TAPE	SHIFT+5
TV CONTROL	SHIFT+6
TUNER	SHIFT+7
TV/SAT	SHIFT+8
CLASS	SHIFT+
DIRECT	SHIFT+
FQ.+	SHIFT+ P+
FQ. -	SHIFT+ P -

