



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
TOP MENU	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD/USB	 / SOURCE
DISPLAY	
ANGLE	
SKIP NEXT	P+
SKIP PREV	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
HOME	EPG
EJECT	 / NET TV
PAUSE	
STOP	 / SMART
REW / STEP BACK	GREEN
PLAY	YELLOW
FWD / STEP FWD	BLUE
AUDIO	SHIFT+MUTE
CLEAR	SHIFT+EXIT

[illegible]