



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT NEXT	 / SOURCE
DVD /HDD	-/--
DISPLAY	
TOP MENU	
DISC NAVI	
TXT	
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
G – CODE	SLEEP
ATV/DTV	TV/DTV
INFO	INFO
GUIDE	EPG
ANGLE	FAV
RECORD MODE	 / NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	 / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
HOME MENU	SHIFT+MENU
CANC	SHIFT+EXIT
DVD	SHIFT+1
HDD	SHIFT+2
PLUS	SHIFT+3
TIMER RECORD	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT/PREV	SHIFT+ P+/-
CM BACK	SHIFT+BACK
CM SKIP	SHIFT+SLEEP
TV/DVD	SHIFT+TV/DTV
ONE TOUC COPY	SHIFT+INFO
HELP	SHIFT+FAV
PAUSE LIVE TV	SHIFT+ 
RECORD STOP	SHIFT+ 
RED	SHIFT+RED
GREEN	SHIFT+GREEN
YELLOW	SHIFT+YELLOW
BLUE	SHIFT+BLUE

