



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
⏏ / AUDIO	MUTE
HOME MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	📺 / SOURCE
NAVI MARK	-/--
DISPLAY	📺
📺 / ANGLE	📺
CHP MARK	📺
📺 / SUBTITLE	📺
SKIP NEXT	P+
SKIP PREV	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
TIMER REC	SLEEP
TV / DVD	TV/DTV
DISC HISTORY	INFO
PLAY LIST / MENU	EPG
DISC NAVIG. / TOP MENU	FAV

ORIGINAL	SUPERIOR
OPEN / CLOSE	⬆ / NET TV
PAUSE	⏸
STOP	📺 / SMART
REC	RED
REW	GREEN
PLAY	YELLOW
FWD	BLUE
SHOWVIEW	SHIFT+ 📺
CHANNEL+	SHIFT+ P+
CHANNEL -	SHIFT+ P-
*➡ / SKIP	SHIFT+UP
↶ / BACK	SHIFT+DOWN
< STEP / SLOW	SHIFT+LEFT
STEP / SLOW >	SHIFT+RIGHT
EASY TIMER	SHIFT+SLEEP
TV DIRECT REC	SHIFT+FAV
STOP REC	SHIFT+ 📺
REC MODE	SHIFT+RED
PLAY MODE	SHIFT+YELLOW

