



ORIGINAL	SUPERIOR
STANDBY/ON	POWER
AUDIO	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
HOME MENU	-/--
DISPLAY	
ONE TOUCH PLAY	
ANGLE	
SUBTITLE	
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN / EXIT	BACK
TOP MENU / DISC NAVIG.	SLEEP
A.TV/D.TV	TV/DTV
INFO	INFO
GUIDE	EPG
REC MODE	FAV

ORIGINAL	SUPERIOR
PAUSE LIVE TV	
STOP REC	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
DVD	SHIFT+1
HDD	SHIFT+2
HMG PC VIDEO	SHIFT+
HMG MUSIC	SHIFT+
HMG PHOTO	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
CM BACK	SHIFT+LEFT
CM SKIP	SHIFT+RIGHT
TIMER REC	SHIFT+SLEEP
HELP	SHIFT+INFO
OPEN/CLOSE	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

