



| ORIGINAL            | SUPERIOR  |
|---------------------|-----------|
| STANDBY / ON        | POWER     |
| AUDIO / AUDIO SEL.  | MUTE      |
| DVD MENU            | MENU      |
| CANCEL              | EXIT      |
| 1/2/3/4/5           | 1/2/3/4/5 |
| 6/7/8/9/0           | 6/7/8/9/0 |
| INPUT SELECT        | / SOURCE  |
| DVD / VCR           | -/--      |
| DISPLAY             |           |
| ZOOM                |           |
| SETUP               |           |
| SUBTITLE / ATR      |           |
| SKIP/INDEX+/NEXT    | P+        |
| SKIP/INDEX -/PREV   | P -       |
| UP / CH+            | UP        |
| DOWN / CH-          | DOWN      |
| LEFT / TRK.-        | LEFT      |
| RIGHT / TRK.+       | RIGHT     |
| ENTER               | OK        |
| RETURN              | BACK      |
| DUBBING             | SLEEP     |
| TI. MENU / TOP MENU | INFO      |
| COUN. RESET / ANGLE | EPG       |
| REC MODE / SPEED    | FAV       |
| DVD – OPEN/CLOSE    | / NET TV  |

| ORIGINAL           | SUPERIOR     |
|--------------------|--------------|
| PAUSE / STILL      |              |
| STOP               | / SMART      |
| REC                | RED          |
| REW / SEARCH -     | GREEN        |
| PLAY               | YELLOW       |
| F. FWD / SEARCH+   | BLUE         |
| CLOCK / COUNTER    | SHIFT+POWER  |
| VIDEO PLUS +       | SHIFT+       |
| ONE TOUCH REPEAT   | SHIFT+       |
| REPEAT A – B       | SHIFT+BACK   |
| TIMER REC          | SHIFT+SLEEP  |
| CM SKIP            | SHIFT+TV/DTV |
| VCR – EJECT        | SHIFT+       |
| ▶ / SLOW           | SHIFT+       |
| ZERO RETURN        | SHIFT+       |
| PLAY MODE / REPEAT | SHIFT+YELLOW |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |
|                    |              |

