



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU / POPUP MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FUNCTION	/ AV
KEY / ECHO	-/--
DISPLAY	
RESOLUTION	
TOOLS	
SUBTITLE	
VOL +/-	VOL +/-
SKIP NEXT / PREV.	P +/-
UP / DOWN	UP / DOWN
LEFT / RIGHT	LEFT / RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
CD / SACD	TV/DTV
DIMMER	INFO
HOME MEDIA GALLERY	EPG
TOP MENU	FAV
OPEN / CLOSE	
PAUSE	

ORIGINAL	SUPERIOR
STOP	
USB REC	RED
REV	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
/ HOME MENU	SHIFT+MENU
CLEAR	SHIFT+EXIT
ANGLE	SHIFT+ -/--
VIRTUAL 3D SOUND	SHIFT+
CONTINUED	SHIFT+
REPLAY	SHIFT+
NET CONTENT	SHIFT+
MIC VOL +/-	SHIFT+ VOL +/-
/ SKIP SEARCH	SHIFT+RIGHT
REPEAT	SHIFT+BACK
A – B	SHIFT+SLEEP
KARAOKE	SHIFT+TV/DTV
SOUND	SHIFT+INFO
YOUTUBE	SHIFT+FAV
R / PROGRAM	SHIFT+RED
G / BOOKMARK / RDS	SHIFT+GREEN
Y / ZOOM / PTY	SHIFT+YELLOW
B / INDEX	SHIFT+BLUE

