



ORIGINAL	SUPERIOR
TV	POWER
MUTE	MUTE
/ HOME ME. / MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
PC	/ SOURCE
HMG	-/--
DVD	
TOOLS	
VOL+	VOL+
VOL -	VOL -
/ P+	P+
/ P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
TV / DTV / SAT	TV/DTV
i+ / INFO /	INFO
EPG / DVD TOP M./GU.	EPG

ORIGINAL	SUPERIOR
CTRL. HDMI	FAV
/ HDD	/ NET TV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
I - II	SHIFT+MUTE
INPUT 1/2/3/4/5	SHIFT+1/2/3/4/5
	SHIFT+
	SHIFT+
	SHIFT+
	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
CH. RETURN	SHIFT+BACK
	SHIFT+INFO
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

