



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MUTE	MUTE
DIMMER	MENU
CLEAR	EXIT
BLUETOOTH	1
CD	2
LINE DIGITAL	3
NETWORK	4
TUNER	5
USB	6
MODE	 / SOURCE
SHUFFLE REPEAT	-/--
SETUP	
VOL+	VOL+
VOL -	VOL -
SKIP/PRESET NEXT	P+
SKIP/PRESET PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
 / RETURN	BACK
SLEEP	SLEEP
SOUND	TV/DTV

ORIGINAL	SUPERIOR
NOW PLAYING / i	INFO
MEMORY	EPG
TIMER	FAV
STOP	 / SMART
REW / TUNER -	GREEN
PLAY / PAUSE	YELLOW
FWD / TUNER+	BLUE

