



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
□ / INPUT / TUNER	□ / SOURCE
OPTICAL	-/--
□ / DISPLAY	□
ZOOM	□
SPK LEVEL	□
↑ / HOME MENU	□
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP / PRESET+	UP
DOWN / PREST -	DOWN
LEFT / TUN-	LEFT
RIGHT / TUN+	RIGHT
ENTER	OK
⌂ / RETURN	BACK
SLEEP	SLEEP
SOUND	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
POPUP MENU / TOP MENU	EPG
MARKER	FAV
OPEN / CLOSE	▲ / NET TV
PAUSE / STEP	⏸
STOP	■ / SMART
USB REC	RED
SCAN REW	GREEN
PLAY	YELLOW
SCAN FWD	BLUE
BT AUDIO	SHIFT+MUTE
SEARCH	SHIFT+EXIT
↺ / REPEAT	SHIFT+BACK
RED / A	SHIFT+RED
GREEN / B	SHIFT+GREEN
YELLOW / C	SHIFT+YELLOW
BLUE / D / ST/MONO	SHIFT+BLUE

