

ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MODE AUTO DIRECT	MENU
RETURN	BACK
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
SBCH	-/--
MODE STERO	
MODE ALC STAND.	
SETUP/HOME	
PHASE	
MASTER VOL+	VOL+
MASTER VOL -	VOL -
UP/TUNE+	UP
DOWN/TUNE -	DOWN
LEFT/PRESET -	LEFT
RIGHT/PRESET+	RIGHT
ENTER	OK
SLEEP	SLEEP
INPUT TV	TV/DTV
DIMMER/CLR	INFO
SOUND RETRIEVER	EPG
SPEAKERS	FAV
REW	GREEN

ORIGINAL	SUPERIOR
FWD	BLUE
AUDIO PAR/TOP MENU	SHIFT+MUTE
CD	SHIFT+1
CD - R	SHIFT+2
DVD	SHIFT+3
DVR - BDR	SHIFT+4
ADAPTER	SHIFT+5
BD	SHIFT+6
PORTABLE	SHIFT+7
SIGNAL SELECT	SHIFT+ 
TUNER DISPLAY	SHIFT+ 
TUNER EDIT	SHIFT+ 
TUNER BAND	SHIFT+ 
CHANNEL LEVEL+	SHIFT+ VOL+
CHANNEL LEVEL -	SHIFT+ VOL -
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
BASS+	SHIFT+UP
BASS -	SHIFT+DOWN
TREBLE -	SHIFT+LEFT
TREBLE+	SHIFT+RIGHT
TUNER ENTER	SHIFT+OK
MIDNIGHT	SHIFT+SLEEP
CHANNEL SELECT	SHIFT+TV/DTV

