



We are sorry,
PICTURE
NOT
AVAILABLE

ORIGINAL	SUPERIOR	ORIGINAL	SUPERIOR
POWER	POWER	PAUSE	
MUTE	MUTE	STOP	
DIALOG ENHANCE MENU	MENU	GREEN	GREEN
FM	1	PLAY	YELLOW
AM	2	FWD	BLUE
DVD	3	SKIP NEXT CHAP	SHIFT+P+
DVR	4	SKIP PREV CHAP	SHIFT+P-
CD	5	SETUP	SHIFT+ 
CD-R	6	EFFECT CH. SELECT	SHIFT+OK
DVD 5.1	7	LEVEL +	SHIFT+UP
USB	8	LEVEL -	SHIFT+DOWN
ATTENUATION	9		
MIDNIGHT LOUDNESS	0		
VOL+ / VOL-	VOL+ / VOL-		
INPUT NEXT	AV		
UP/DOWN/LEFT/RIGHT/OK	UP/DOWN/LEFT/RIGHT/OK		
DIMMER			
TUNER EDIT			
SURR STANDARD			
SURR ADVANCED			
STEREO	-/--		
ACOUSTIC EQ	EPG		
S. RETREIVER	INFO		
SYNTH CH+/CH-	CH+/CH-		
CLASS	FAV		

