



| ORIGINAL            | SUPERIOR  |
|---------------------|-----------|
| – RECEIVER          | POWER     |
| MUTE                | MUTE      |
| / SETUP             | MENU      |
| X / AUDIO PARAMETER | EXIT      |
| 1/2/3/4/5           | 1/2/3/4/5 |
| 6/7/8/9/0           | 6/7/8/9/0 |
| INPUT SELECT – ←    | / SOURCE  |
| INPUT SELECT – →    | -/--      |
| DISP.               |           |
| S. RETRIEVER        |           |
| TUNER EDIT          |           |
| BAND                |           |
| MASTER VOLUME+      | VOL+      |
| MASTER VOLUME -     | VOL -     |
| PRESET NEXT         | P+        |
| PRESET PREV         | P -       |
| UP                  | UP        |
| DOWN                | DOWN      |
| LEFT                | LEFT      |
| RIGHT               | RIGHT     |
| ENTER               | OK        |
| / RETURN            | BACK      |
| SLEEP               | SLEEP     |
| SPEAKERS            | TV/DTV    |
| DIMMER              | INFO      |

| ORIGINAL        | SUPERIOR     |
|-----------------|--------------|
| SB. CH.         | EPG          |
| PHASE           | FAV          |
| AUTO / DIRECT   | RED          |
| STEREO / A.L.C. | GREEN        |
| STANDARD        | YELLOW       |
| AUTO / DIRECT   | BLUE         |
| BD              | SHIFT+1      |
| CD              | SHIFT+2      |
| CD-R            | SHIFT+3      |
| DVD             | SHIFT+4      |
| DVR             | SHIFT+5      |
| MULTI IN        | SHIFT+6      |
| PORTABLE        | SHIFT+7      |
| TUNER           | SHIFT+8      |
| SIGNAL SEL.     | SHIFT+       |
| CH SELECT       | SHIFT+ -/--  |
| CH LEV+         | SHIFT+ VOL+  |
| CH LEV -        | SHIFT+ VOL - |
| TUNE+/-         | SHIFT+ P+/-  |
| BASS+           | SHIFT+UP     |
| BASS -          | SHIFT+DOWN   |
| TRE. -          | SHIFT+LEFT   |
| TRE. +          | SHIFT+RIGHT  |
| 2nd ENTER       | SHIFT+OK     |
| MIDNIGHT        | SHIFT+SLEEP  |

