



| ORIGINAL                                                                                     | SUPERIOR                                                                                     |
|----------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| STANDBY / ON                                                                                 | POWER                                                                                        |
| HOME MENU                                                                                    | MENU                                                                                         |
| CLEAR                                                                                        | EXIT                                                                                         |
| 1/2/3/4/5                                                                                    | 1/2/3/4/5                                                                                    |
| 6/7/8/9/0                                                                                    | 6/7/8/9/0                                                                                    |
| INPUT SELECT                                                                                 |  / SOURCE   |
| → / CM SKIP                                                                                  | -/--                                                                                         |
| DISPLAY                                                                                      |             |
| PLAY LIST / MENU                                                                             |             |
| SHOWVIEW                                                                                     |             |
|  / SUBTITLE |             |
| SKIP NEXT                                                                                    | P+                                                                                           |
| SKIP PREV                                                                                    | P -                                                                                          |
| UP                                                                                           | UP                                                                                           |
| DOWN                                                                                         | DOWN                                                                                         |
| LEFT                                                                                         | LEFT                                                                                         |
| RIGHT                                                                                        | RIGHT                                                                                        |
| ENTER                                                                                        | OK                                                                                           |
| RETURN                                                                                       | BACK                                                                                         |
| TV / DVD                                                                                     | TV/DTV                                                                                       |
| DISC HISTORY                                                                                 | INFO                                                                                         |
| DISC NAV. / TOP MENU                                                                         | EPG                                                                                          |
| NAVI. MARK                                                                                   | FAV                                                                                          |
| OPEN / CLOSE                                                                                 |  / NET TV |
| PAUSE                                                                                        |           |

| ORIGINAL                                                                                    | SUPERIOR                                                                                     |
|---------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------|
| STOP                                                                                        |  / SMART    |
| REC                                                                                         | RED                                                                                          |
| REV. SCAN                                                                                   | GREEN                                                                                        |
| PLAY                                                                                        | YELLOW                                                                                       |
| FWD SCAN                                                                                    | BLUE                                                                                         |
|  / AUDIO | SHIFT+MUTE                                                                                   |
| DVD                                                                                         | SHIFT+1                                                                                      |
| HDD                                                                                         | SHIFT+2                                                                                      |
| TV DIRECT REC                                                                               | SHIFT+    |
| EASY TIMER                                                                                  | SHIFT+    |
| STEP/SLOW REW                                                                               | SHIFT+LEFT                                                                                   |
| STEP/SLOW FWD                                                                               | SHIFT+RIGHT                                                                                  |
| CHP. MARK                                                                                   | SHIFT+INFO                                                                                   |
| TIMER REC                                                                                   | SHIFT+EPG                                                                                    |
| ANGLE                                                                                       | SHIFT+FAV                                                                                    |
| STOP REC                                                                                    | SHIFT+    |
| REC MODE                                                                                    | SHIFT+RED                                                                                    |
| PLAY MODE                                                                                   | SHIFT+YELLOW                                                                                 |
| <b>TV CONTROL</b>                                                                           |                                                                                              |
| POWER                                                                                       | SHIFT+POWER                                                                                  |
| INPUT SELECT                                                                                | SHIFT+  |
| VOLUME+/-                                                                                   | SHIFT+ VOL+/-                                                                                |
| CHANNEL+/-                                                                                  | SHIFT+ P+/-                                                                                  |
|                                                                                             |                                                                                              |

