



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
HOME MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
→ / CM SKIP	-/--
DISPLAY	
PLAY LIST / MENU	
VCR PLUS+	
/ SUBTITLE	
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
RETURN	BACK
DISC HISTORY	INFO
DISC NAV. / TOP MENU	EPG
NAVI. MARK	FAV
OPEN / CLOSE	/ NET TV
PAUSE	
STOP	/ SMART

ORIGINAL	SUPERIOR
REC	RED
REV. SCAN	GREEN
PLAY	YELLOW
FWD SCAN	BLUE
/ AUDIO	SHIFT+MUTE
DVD	SHIFT+1
HDD	SHIFT+2
EASY TIMER	SHIFT+
STEP/SLOW REW	SHIFT+LEFT
STEP/SLOW FWD	SHIFT+RIGHT
CHP. MARK	SHIFT+INFO
TIMER REC	SHIFT+EPG
ANGLE	SHIFT+FAV
STOP REC	SHIFT+
REC MODE	SHIFT+RED
PLAY MODE	SHIFT+YELLOW
TV CONTROL	
POWER	SHIFT+POWER
INPUT SELECT	SHIFT+
VOLUME+	SHIFT+ VOL+
VOLUME -	SHIFT+ VOL -
CHANNEL+	SHIFT+ P+
CHANNEL -	SHIFT+ P -

