



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
AUDIO / AUDIO SEL.	MUTE
DVD MENU	MENU
CANCEL	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	/ SOURCE
DVD / VCR	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE / ATR	
SKIP/INDEX+/NEXT	P+
SKIP/INDEX -/PREV	P-
UP / CH+	UP
DOWN / CH-	DOWN
LEFT / TRK-	LEFT
RIGHT / TRK+	RIGHT
ENTER	OK
RETURN	BACK
DUBBING	SLEEP
TV / VCR	TV/DTV
TI. MENU / TOP MENU	INFO
COUN. RESET / ANGLE	EPG
REC MODE / SPEED	FAV

ORIGINAL	SUPERIOR
DVD – OPEN/CLOSE	/ NET TV
PAUSE / STILL	
STOP	/ SMART
REC	RED
REW / SEARCH -	GREEN
PLAY	YELLOW
F. FWD / SEARCH+	BLUE
CLOCK / COUNTER	SHIFT+POWER
SHOW VIEW	SHIFT+
ONE TOUCH REPEAT	SHIFT+
REPEAT A-B	SHIFT+BACK
TIMER REC	SHIFT+SLEEP
CM SKIP	SHIFT+TV/DTV
VCR – EJECT	SHIFT+
/ SLOW	SHIFT+
ZERO RETURN	SHIFT+
PLAY MODE / REPEAT	SHIFT+YELLOW

