



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	 / SOURCE
DISPLAY	
ANGLE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT / CM BACK	LEFT
RIGHT / CM SKIP	RIGHT
ENTER	OK
RETURN / EXIT	BACK
SLEEP	SLEEP
TV/DTV	TV/DTV
INFO	INFO
GUIDE	EPG
REC. MODE	FAV
PAUSE LIVE TV	

ORIGINAL	SUPERIOR
STOP REC.	 / SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
HOME MENU	SHIFT+MENU
TOP MENU / DISC NAV.	SHIFT+EXIT
HDD / DVD	SHIFT+ 
ONE TOUCH COPY	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
2nd CLEAR	SHIFT+BACK
TV / DVD	SHIFT+ TV/DTV
HELP	SHIFT+INFO
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW / STEP BACK.	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD / STEP FWD	SHIFT+BLUE

