



ORIGINAL	SUPERIOR
POWER	POWER
MENU	MENU
TOP MENU / DISC NAV.	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT SELECT	 / SOURCE
DISPLAY	
ONE TOUCH COPY	
ANGLE	
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
TV/DVD	TV/DTV
INFO	INFO
GUIDE	EPG
PAUSE LIVE TV	
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE

ORIGINAL	SUPERIOR
AUDIO	SHIFT+MUTE
HOME MENU	SHIFT+MENU
CLEAR	SHIFT+EXIT
HDD / DVD	SHIFT+ 
SUBTITLE	SHIFT+ 
CM SKIP	SHIFT+UP
STEP REV.	SHIFT+LEFT
STEP FWD	SHIFT+RIGHT
STOP REC	SHIFT+OK
SKIP NEXT	SHIFT+ P +
SKIP PREV	SHIFT+ P -
CM REVERSE	SHIFT+BACK
TIME REC	SHIFT+SLEEP
HELP	SHIFT+INFO
REC MODE	SHIFT+EPG
PLAY MODE	SHIFT+FAV
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

