



| ORIGINAL       | SUPERIOR  |
|----------------|-----------|
| STANDBY-ON     | POWER     |
| AUDIO          | MUTE      |
| HOME MENU      | MENU      |
| EXIT           | EXIT      |
| 1/2/3/4/5      | 1/2/3/4/5 |
| 6/7/8/9/0      | 6/7/8/9/0 |
| INPUT SELECT   | / AV      |
| TV / DVD       | -/--      |
| DISPLAY        |           |
| ONE TOUCH COPY |           |
| ANGLE          |           |
| TEXT           |           |
| CM SKIP        | VOL+      |
| CM BACK        | VOL-      |
| SKIP NEXT      | P+        |
| SKIP PREV.     | P-        |
| UP             | UP        |
| DOWN           | DOWN      |
| LEFT           | LEFT      |
| RIGHT          | RIGHT     |
| OK             | OK        |
| RETURN         | BACK      |
| TIMER REC      | SLEEP     |
| A. TV / D. TV  | TV/DTV    |
| INFO           | INFO      |

| ORIGINAL             | SUPERIOR     |
|----------------------|--------------|
| GUIDE                | EPG          |
| DISC NAV. / TOP MENU | FAV          |
| OPEN / CLOSE         |              |
| PAUSE                |              |
| STOP                 |              |
| REC                  | RED          |
| REW                  | GREEN        |
| PLAY                 | YELLOW       |
| FWD                  | BLUE         |
| CLEAR                | SHIFT+EXIT   |
| DVD                  | SHIFT+1      |
| HDD                  | SHIFT+2      |
| HMG PHOTO            | SHIFT+       |
| HMG PC-VIDEO         | SHIFT+       |
| HMG MUSIC            | SHIFT+       |
| CHANNEL+             | SHIFT+ P+    |
| CHANNEL-             | SHIFT+ P-    |
| STOP REC             | SHIFT+SLEEP  |
| HELP                 | SHIFT+INFO   |
| REC MODE             | SHIFT+FAV    |
| PAUSE LIVE TV        | SHIFT+       |
| RED                  | SHIFT+RED    |
| GREEN                | SHIFT+GREEN  |
| YELLOW               | SHIFT+YELLOW |
| BLUE                 | SHIFT+BLUE   |

