



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FOLDER	/ SOURCE
CLOCK / TIMER	-/--
DISPLAY	
BASS / TREBLE	
EQUALIZER	
P. BASS	
VOLUME+	VOL+
VOLUME -	VOL -
PRESET+	P+
PRESET -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
REPEAT	BACK
SLEEP	SLEEP
ST / MONO	TV/DTV
DIMMER	INFO

ORIGINAL	SUPERIOR
MEMORY / PROGRAM	EPG
RANDOM	FAV
OPEN / CLOSE	/ NET TV
STOP	/ SMART
REW / SKIP PREV	GREEN
PLAY / PAUSE	YELLOW
FWD / SKIP NEXT	BLUE
AUDIO IN	SHIFT+1
CD	SHIFT+2
TUNER	SHIFT+3
USB	SHFIT+4
RDS DISPLAY	SHIFT+
RDS PTY	SHIFT+
RDS ASPM	SHIFT+
TUNE+	SHIFT+ VOL+
TUNE -	SHIFT+ VOL -

