



ORIGINAL	SUPERIOR
STANDBY – ON	POWER
MUTE	MUTE
MENU/PBC	MENU
CLEAR	EXIT
1 – AUDIO	1
2 – SUBTITLE	2
3 – ANGLE	3
4 – ZOOM	4
5 – MEMORY	5
6 – PROGRAM	6
7 – ST/MONO	7
8 – VIDEO MODE	8
9 – A/B	9
0	0
CLOCK/TIMER	-/-
DISPLAY	
P.BASS	
BASS/TREBLE	
EQUAIZER	
VOLUME+	VOL+
VOLUME -	VOL -
FWD/SKIP NEXT	P+
REW/SKIP PREV	P -
UP/TUNE+	UP
DOWN/TUNE -	DOWN

ORIGINAL	SUPERIOR
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
↶ / RETURN	BACK
SLEEP	SLEEP
REPEAT/RANDOM	TV/DTV
DIMMER	INFO
TOP MENU	EPG
OPEN/CLOSE	/ NET TV
STOP	/ SMART
PLAY/PAUSE	YELLOW
AUDIO IN/LINE	SHIFT+1
BT AUDIO	SHIFT+2
DVD/CD	SHIFT+3
TUNER	SHIFT+4
USB	SHIFT+5
RDS DISPLAY	SHIFT+
RDS ASPM	SHIFT+
RDS OTY	SHIFT+
PRESET+	SHIFT+ P+
PRESET -	SHIFT+ P -

