



ORIGINAL	SUPERIOR
STANDBY / ON	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT / TUNER	 / SOURCE
OPTICAL	-/--
DISPLAY	
ZOOM	
SPK LEVEL	
 / HOME MENU	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP / PRESET+	UP
DOWN / PREST -	DOWN
LEFT / TUN-	LEFT
RIGHT / TUN+	RIGHT
ENTER	OK
 / RETURN	BACK
SLEEP	SLEEP
SOUND	TV/DTV
DIMMER	INFO

[illegible]