



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
DVD MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DVD CD	/ SOURCE
AUTO	-/--
DISPLAY	
ZOOM	
SYSTEM SETUP	
PROGRAM	
VOL+	VOL+
VOL -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
TIMER CLOCK	SLEEP
TV	TV/DTV
TOP MENU	EPG

ORIGINAL	SUPERIOR
SOUND	FAV
EJECT	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
QUIET MIDNIGHT	SHIFT+POWER
AUDIO	SHIFT+MENU
HOME MENU	SHIFT+MENU
LINE L1/L2	SHIFT+1
BASS MODE	SHIFT+2
DIALOGUE	SHIFT+3
VIRTUAL SB	SHIFT+4
TEST TONE	SHIFT+5
CH LEVEL	SHIFT+6
SURROUND	SHIFT+7
ADVANCED	SHIFT+8
ROOM SETUP	SHIFT+9
DIMMER	SHIFT+
ANGLE	SHIFT+
SUBTITLE	SHIFT+
REPEAT	SHIFT+BACK
RADIO	SHIFT+TV/DTV
RANDOM	SHIFT+FAV

