



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
TOP MENU/DIALOGUE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
ADVANCED	/ SOURCE
RANDOM	-/--
DISPLAY	
ZOOM	
DIMMER	
SUBTITLE	
VOL+	VOL+/-
SKIP NEXT/PREV	P+/-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
QUIET	SLEEP
VIRTUAL SB	TV/DTV
CLEAR	INFO
PROGRAM	EPG
EJECT	/ NET TV

ORIGINAL	SUPERIOR
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
TIMER	SHIFT+POWER
AUDIO	SHIFT+MUTE
SETUP	SHIFT+MENU
ROOM SETUP	SHIFT+EXIT
DVD – CD	SHIFT+1
LINE	SHIFT+2
TUNER	SHIFT+3
ITV	SHIFT+4
ANGLE	SHIFT+
TUNE +/-	SHIFT+ VOL+/-
PRESET PREV/NEXT	SHIFT+LEFT/RIGHT
FOLDER PREV/NEXT	SHIFT+DOWN/UP
REPEAT	SHIFT+BACK
AUTO/HOME MENU	SHIFT+
TEST TONE	SHIFT+
BASS MODE	SHIFT+RED
CHANNEL LVL	SHIFT+GREEN
SOUND	SHIFT+YELLOW
SURROUND	SHIFT+BLUE

