


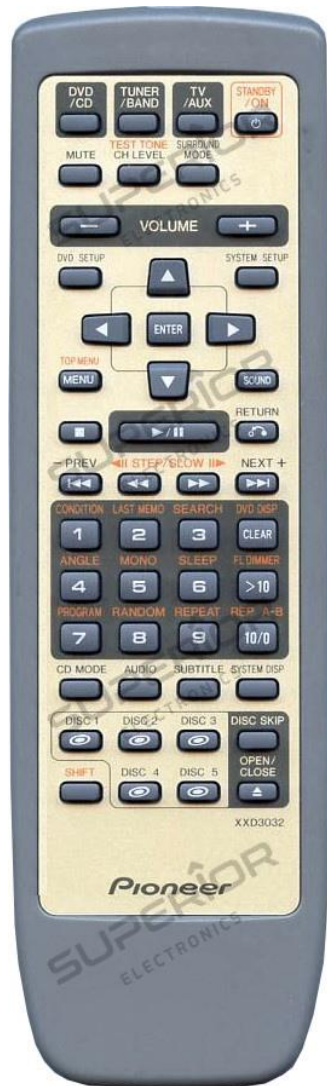

ORIGINAL	SUPERIOR
STANDBY/ON	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
DSP	/ SOURCE
>10	-/--
DVD DISPLAY	
MONO	
ANGLE	
SUBTITLE	
VOLUME+/-	VOL+/-
SKIP NEXT/PREV	P+/-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
/ RETURN	BACK
SLEEP	SLEEP
RANDOM	TV/DTV
FL DIMMER	INFO
PROGRAM	EPG
TOP MENU	FAV

ORIGINAL	SUPERIOR
OPEN/CLOSE	/ NET TV
STOP	/ SMART
REW	GREEN
PLAY/PAUSE	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
SYSTEM SETUP	SHIFT+MENU
DISC SKIP	SHIFT+EXIT
DISC 1	SHIFT+1
DISC 2	SHIFT+2
DISC 3	SHIFT+3
DISC 4	SHIFT+4
DISC 5	SHIFT+5
DVD/CD	SHIFT+6
TUNER/BAND	SHIFT+7
TV/AUX	SHIFT+8
CD MODE	SHIFT+
TEST TONE	SHIFT+ -/--
SURROUND MDOE	SHIFT+
CH LEVEL	SHIFT+
DVD SETUP	SHIFT+
SOUND MODE	SHIFT+
REPEAT	SHIFT+BACK
REP A – B	SHIFT+SLEEP
LAST MEMO	SHIFT+FAV

