



A black Superior 4 in 1 remote control. The top features a red Power button and a Mute button with a speaker icon. Below these are four small indicator lights and four function buttons: TV, SAT, DVD, and AUX. The next row contains MENU, EXIT, and SHIFT buttons. A numeric keypad (1-9, 0, +/-) follows. Below the numbers are TV/AV, 0, and +/- buttons. The next row has PVR, SIZE, and SETUP buttons. A large central section contains a directional pad with an OK button in the center, and +V, P+, -V, and P- buttons around it. Below this are BACK, SLEEP, and TV/DTV buttons. The next row has INFO, EPG, and FAV buttons. Below these are a red NET TV button, a pause button (II), and a SMART button. The bottom row features a red power button, a green left arrow, a yellow right arrow, and a blue right arrow. The text "SUPERIOR 4 in 1" is printed at the very bottom.