



ORIGINAL	SUPERIOR
STANDBY/ON	POWER
MUTE	MUTE
MENU	MENU
CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
FRT. SURR./EXT PWR	/ SOURCE
HOME MENU	-/--
DISPLAY	
ZOOM	
SETUP	
SUBTITLE	
VOLUME+	VOL+
VOLUME -	VOL -
SKIP NEXT	P+
SKIP PREV	P -
UP / TUNE+	UP
DOWN / TUNE -	DOWN
LEFT / ST -	LEFT
RIGHT / ST+	RIGHT
ENTER	OK
RETURN	BACK
SOUND	SLEEP
SURROUND	TV/DTV
ANGLE	EPG

ORIGINAL	SUPERIOR
TOP MENU	FAV
OPEN/CLOSE	/ NET TV
PAUSE	
STOP	/ SMART
REW	GREEN
PLAY	YELLOW
FWD	BLUE
AUDIO	SHIFT+MUTE
PLAYLIST 1	SHIFT+1
PLAYLIST 2	SHIFT+2
PLAYLIST 3	SHIFT+3
DVD/CD	SHIFT+4
LINE	SHIFT+5
TUNER (AM/FM)	SHIFT+6
USB	SHIFT+7

