



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
/ HOME	MENU
← / CLEAR	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ RELOAD	-/--
i / DISPLAY	
/ AR	
SETUP	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
VOD	TV/DTV
EPG	EPG
/ STEREO	FAV
RED	RED
GREEN	GREEN

ORIGINAL	SUPERIOR
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
/ SWAP	SHIFT+2
? / HELP	SHIFT+6
PAGE UP	SHIFT+UP
PAGE DOWN	SHIFT+DOWN
NEXT	SHIFT+BACK
PAUSE	SHIFT+
STOP	SHIFT+
F. R.	SHIFT+GREEN
PLAY	SHIFT+YELLOW
F. F.	SHIFT+BLUE

