



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT / TITLE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
DISPLAY	
ASPECT	
P – MODE	
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
MEDIA	TV/DTV
S – MODE	INFO

ORIGINAL	SUPERIOR
D. MENU	EPG
FAV	FAV
HOLD	 / SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / LANGUAGE	SHIFT+MUTE
ZOOM	SHIFT+ 
SETUP	SHIFT+ 
SUBTITLE	SHIFT+ 
SUBPAGE	SHIFT+DOWN
RADIO	SHIFT+TV/DTV
EJECT	SHIFT+ 
PAUSE	SHIFT+ 
STOP	SHIFT+ 
SKIP NEXT	SHIFT+P+
SKIP PREV	SHIFT+P -
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

