



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
/ MENU	MENU
/ EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
AV	/ SOURCE
/ FILE LIST	-/--
/ A↔B	
PIC. SIZE	
/ BOOKMARK	
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
PRE. CH.	BACK
TV	TV/DTV
i	INFO
EPG	EPG

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
M / S	SHIFT+MUTE
PIC. MODE	SHIFT+
SND. MODE	SHIFT+
OPTION	SHIFT+
/ REPEAT	SHIFT+BACK
DTV / RADIO	SHIFT+ TV/DTV
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

