



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
HDMI CONTROL	-/--
DISPLAY	
EARTH	
LANGUAGE	
TEXT	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
RETURN	BACK
SLEEP	SLEEP
SCREEN	TV/DTV
INFO	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
C	SHIFT+MENU
SEARCH MODE	SHIFT+EXIT
SWAP	SHIFT+2
MEDIA	SHIFT+6
SUBTITLE	SHIFT+ 
STEP FWD	SHIFT+ P+
STEP REW	SHIFT+ P -
PRESETS	SHIFT+EPG
PAUSE	SHIFT+ 
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

