



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
-/--	-/--
P. MODE	
S. MODE	
LIST	
TTX	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
	SLEEP
DTV/ATV	TV/DTV
i	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
ASPECT	 / NET TV
STILL	 / SMART TUBE
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
MTS	SHIFT+MUTE
REC MENU	SHIFT+MENU
SUBTITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
T. SHIFT	SHIFT+SLEEP
DTV/RADIO / REPEAT	SHIFT+TV/DTV
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

