



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ AV
-/--	-/--
/ P. STD	
/ REPEAT	
/ A-B	
VOL+	VOL+
VOL-	VOL-
PROGRAM+	P+
PROGRAM-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ SUBTITLE	BACK
SLEEP	SLEEP
	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
/ TITLE	EPG
/ MENU	FAV
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO / I/II	SHIFT+MUTE
DVD/ SETUP	SHIFT+MENU
/ S. STD	SHIFT+
/ SLOW	SHIFT+
SKIP PREV.	SHIFT+ P-
SKIP NEXT	SHIFT+ P+
EJECT / EXIT	SHIFT+
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

