



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
DVB-T MEN. / PROG.	MENU
→ X ← / EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
TV / DVB-T	/ SOURCE
-/--	-/--
/ DISPLAY	
/ AUDIO	
/ TTX	
VOL UP/DOWN	VOL +/-
PROG UP/DOWN	P +/-
UP / P+	UP
DOWN / P-	DOWN
LEFT / VOL. -	LEFT
RIGHT / VOL. +	RIGHT
ENTER	OK
PRE.	BACK
/ SLEEP	SLEEP
/ TV.MENU	TV/DTV
/ A-B	INFO
/ ZOOM / EPG	EPG
/ P. SIZE	/ NET TV
/ STILL	/ SMART TUBE

ORIGINAL	SUPERIOR
RED / SETUP	RED
GREEN / INPUT	GREEN
YELLOW / TITLE	YELLOW
BLUE / MENU	BLUE
M / S	SHIFT+MUTE
/ CANCEL / i	SHIFT+EXIT
PIP – ON/OFF	SHIFT+1
/ PIP – SWAP	SHIFT+2
PIP – SOUND	SHIFT+3
/ LINE	SHIFT+
PIP – SOURCE	SHIFT+ -/--
/ GO TO	SHIFT+
/ SUBTITLE	SHIFT+
→ X ← / P. STD	SHIFT+
→ X ← / S. STD	SHIFT+
/ ANGLE / LIST	SHIFT+DOWN
/ BOOKM. / OPT.	SHIFT+UP
SKIP/STEP BACK/FWD	SHIFT+ P +/-
/ REPEAT	SHIFT+BACK
OPEN / CLOSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW / SLOW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD / SLOW	SHIFT+BLUE

