



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU / YELLOW	MENU
EXIT / BLUE	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE / GREEN	 / SOURCE
-/--	-/--
DISPLAY	
ASPECT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
ENTER	OK
	BACK
SLEEP	SLEEP
DTV / RED	TV/DTV
INFO	INFO
FAV	FAV
AUTO	 / NET TV

ORIGINAL	SUPERIOR
RED	RED
GREEN	GREEN
YELLOW	YELLOW
CYAN	BLUE
AUDIO	SHIFT+MUTE
P. MODE	SHIFT+1
S. MODE	SHIFT+2
NICAM / A2	SHIFT+3
FREEZE	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT / SUBPAGE	SHIFT+ P+
SKIP PREV / REVEAL	SHIFT+ P -
TV / RADIO	SHIFT+ TV/DTV
STOP / EPG	SHIFT+ 
REC / HOLD	SHIFT+RED
REW / INDEX	SHIFT+GREEN
PLAY/PAUSE / TEXT	SHIFT+YELLOW
FWD / SIZE	SHIFT+BLUE

