



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
10+ / CH. LIST	-/--
/ HOLD	
TTX /	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
INFO	INFO
EPG	EPG
FAV	FAV
ASPECT	/ ASPECT

ORIGINAL	SUPERIOR
RED / GO TO	RED
GREEN / SLOW	GREEN
YELLOW / REPEAT	YELLOW
BLUE / A – B	BLUE
I / II	SHIFT+MUTE
/ CANCEL	SHIFT+EXIT
P. MODE	SHIFT+1
S. MODE	SHIFT+2
DVD SETUP	SHIFT+6
/ REVEAL	SHIFT+
/ TITLE / SIZE	SHIFT+
SUBTITLE	SHIFT+
/ MENU / SUBPAGE	SHIFT+DOWN
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
EJECT / TV/RADIO	SHIFT+INFO
/ AUDIO / INDEX	SHIFT+EPG
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

