



ORIGINAL	SUPERIOR
POWER	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	 / SOURCE
CH.LIST	-/--
DISPLAY	
PICTURE MODE	
MENU MIX	
ZOOM SIZE	
VOL+	VOL+
VOL -	VOL -
P+	P+
P -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
BACK	BACK
SLEEP	SLEEP
TV/RADIO	TV/DTV
INFO INDEX	INFO

ORIGINAL	SUPERIOR
SETUP ON OFF	EPG
FAV	FAV
SUBTITLE	 / SMART
RED / INFO	RED
GREEN / ANGLE	GREEN
YELLOW / SLOW	YELLOW
BLUE / EJECT	BLUE
NICAM	SHIFT+1
AUDIO	SHIFT+MUTE
AUTO	SHIFT+2
AUDIO SUBPAGE	SHIFT+3
T.SHIFT	SHIFT+ 
ZOOM	SHIFT+ 
SKIP NEXT	SHIFT+P+
SKIP PREV	SHIFT+P -
REPEAT	SHIFT+BACK
REPEAT A – B	SHIFT+SLEEP
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY/PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

