



ORIGINAL	SUPERIOR
	POWER
MUTE	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
INPUT	/ AV
CHANNEL LIST	-/--
PICTURE	
SIXE / ANGLE	
DVD SETUP	
TV/TXT / LANGUAGE	
VOL+	VOL+
VOL-	VOL-
CH+	P+
CH-	P-
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
	BACK
SLEEP	SLEEP
INDEX / GOTO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
EPG	EPG
FAV	FAV
ASPECT	
MENU / HOLD	
RD / PROGRAM	RED
GREEN / SLOW	GREEN
YELLOW / DISPLAY	YELLOW
BLUE / A – B	BLUE
NICAM / A2	SHIFT+MUTE
LIST	SHIFT+ -/--
REVEAL / SUBTITLE	SHIFT+
ZOOM / CANCEL	SHIFT+
SOUUND	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV.	SHIFT+ P-
REPEAT	SHIFT+BACK
TITLE / SUBPAGE	SHIFT+INFO
EJECT	SHIFT+
PAUSE	SHIFT+
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY	SHIFT+YELLOW
FWD	SHIFT+BLUE

