



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
/ MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
/ SOURCE	/ SOURCE
i / DISPLAY	
SIZE	
MIX	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
/ ENTER	OK
	BACK
→ / SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV CH	FAV
/ ASPECT	/ NET TV
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
/ P. MODE	SHIFT+1
/ S. MODE	SHIFT+2
REVEAL	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SUBPAGE	SHIFT+DOWN
/ T. SHIFT	SHIFT+SLEEP
STOP	SHIFT+
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

