



ORIGINAL	SUPERIOR
STANDBY	POWER
MUTE	MUTE
 / MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
 / SOURCE	 / SOURCE
i / DISPLAY	
SIZE	
MIX	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
 / ENTER	OK
	BACK
→  / SLEEP	SLEEP
TV / RADIO	TV/DTV
INDEX	INFO
EPG	EPG

ORIGINAL	SUPERIOR
FAV CH	FAV
 / ASPECT	 / NET TV
HOLD	 / SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
AUDIO	SHIFT+MUTE
CANCEL	SHIFT+EXIT
 / P. MODE	SHIFT+1
 / S. MODE	SHIFT+2
REVEAL	SHIFT+ 
SUBTITLE	SHIFT+ 
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
SUBPAGE	SHIFT+DOWN
 / T. SHIFT	SHIFT+SLEEP
STOP	SHIFT+ 
REC	SHIFT+RED
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

