



ORIGINAL	SUPERIOR
	POWER
	MUTE
MENU	MENU
EXIT	EXIT
1/2/3/4/5	1/2/3/4/5
6/7/8/9/0	6/7/8/9/0
SOURCE	/ SOURCE
-/--	-/--
SIZE	
TEXT	
VOL+	VOL+
VOL -	VOL -
CH+	P+
CH -	P -
UP	UP
DOWN	DOWN
LEFT	LEFT
RIGHT	RIGHT
OK	OK
/ MOUSE	BACK
SLEEP	SLEEP
TV / RADIO	TV/DTV
INFO	INFO

ORIGINAL	SUPERIOR
ASPECT	EPG
FAV	FAV
AUTO	/ NET TV
HOLD	/ SMART
RED	RED
GREEN	GREEN
YELLOW	YELLOW
BLUE	BLUE
NICAM / A2	SHIFT+MUTE
CANCEL	SHIFT+EXIT
P. MODE	SHIFT+1
S. MODE	SHIFT+2
MEDIA	SHIFT+6
REVEAL	SHIFT+
A - B	SHIFT+
SUBPAGE	SHIFT+
SUBTITLE	SHIFT+
SKIP NEXT	SHIFT+ P+
SKIP PREV	SHIFT+ P -
REPEAT	SHIFT+BACK
INDEX	SHIFT+INFO
STOP	SHIFT+
REW	SHIFT+GREEN
PLAY / PAUSE	SHIFT+YELLOW
FWD	SHIFT+BLUE

